SCHEIBER SA - 85120 SAINT PIERRE DU CHEMIN - FRANCE

Phone: 02 51 51 73 21 Fax: 02 51 51 75 03 edition 01/96

ref. 30.63351.40: CHARGER IN BIP BOX, 10A without fuse ref. 30.63351.80: CHARGER IN BIP BOX, 10A with fuses

CHARACTERISTICS:


30.63351.40	30.63351.80
230V 50-60 Hz	
1 A	
10 A	
14,3 V +/- 0,1V	
12,8 V +/- 0,1V	
without	7,5 A
without	10 A
lead rechargeable 12V batteries (Pb) 6	
units of 2V, at free or gelified electrolyt.	
70 to 105 Ah	
205 x 205 x 105 mm	
3,5 kg	
fire-proofed, self extinguishing ABS	
max ambient temperature 35°C	
(transformer protected by thermic	
circuit-breaker)	
approved EN 60335-2-29	
	230V 50 1 1 10 14,3 V + 12,8 V + without without without without without without lead rechargeable 12 units of 2V, at free of 70 to 1 205 x 205 x 3,5 fire-proofed, self extended a max ambient ter (transformer protection circuit-be

PARTICULARITIES:

This model of charger do not supply any current, nor gives any voltage to its terminal as long as it is not connected to a battery whose voltage is minimum 8V. This charging system enables lo let the vehicle permanently connected to 230V supplying source. But you have to check regularly batteries' level of electrolyt. In fact, the chemical phenomenon generated by the charge entails water consumption more or less important according to batteries' state and technology.

CONNECTION - PRECAUTIONS FOR USE:

input 230V mains neutral, phase and ground (1)

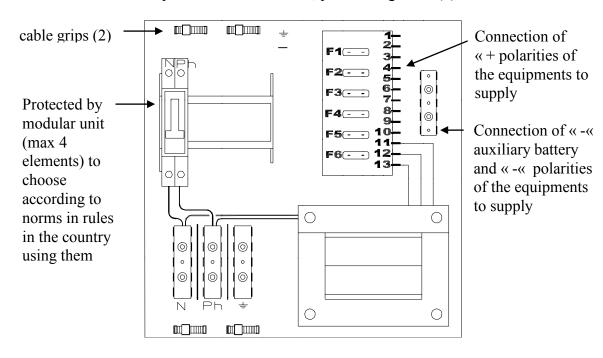

230V uses, neutral, phase and ground

ATTRIBUTION FOR CLAMPS 1 TO 13:

- **1**,**2**,**3**: auxiliary battery inputs (**1** is not used on models with fuses)
- **4**: use output protected by F1 (3) option on models without fuse.
- **⑤**, **⑥**, **⑥**, **⑥**, **⑤** : use output protected by fuse (3) not used on model without fuse : 5 protected by F2, 6 by F3, 7 by F4, 8 by F5, 9 by F6 (3)
- **10**, **10**, **10**, **10** : connection for inside SCHEIBER's transformer (red wire connected to 10)
- **10** : output toward deported signalling of 230V presence.

BE CAREFUL:

- (1) the connection of the input terminal "ground" is OBLIGATORY in order that, in case of bad insulation of the equipments connected on BIP 230V, people remains continuously protected by the differential of the plug on which the vehicle is connected (use the terminal given in accessory).
- (2) when wiring is changed and cable-grips cutted, once new wiring is finished you must NECESSARY replaced cable-grips.
- (3) when changing an output fuse, please respect the calibers given above.

WARNINGS:

- -during the battery recharge, explosive gas are given. Avoid flames and sparks near the battery.
- -disconnect the supply of the charger before connecting or disconnecting the battery plugs.
- -do not try to charge cell or any other non-rechargeable battery.